



The Steinlite Corporation
1015 Main St. Atchison, KS. 66002
913-367-3945
800-462-1835
www.steinlite.com

INSTRUCTIONS TO MANUALLY ADD NEW SL95 CONSTANTS

1. Unseal unit – Pull black knob located in upper left insert area forward.

SKIP #2 instruction

2. Select the commodity calibration you want to edit.

3. Hit menu key. Use right/left arrow key to move cursor over to “Cal” menu.

4. Hit down arrow key. Use right/left arrow key to select the “NEW” menu. You should see a list of numbers on screen (KA0-KA7 etc.)

5. On new constants list, start with top number and go left to right, top to bottom, entering the new numbers. Enter the new number, and hit the down arrow key to accept new entry. The cursor will

automatically advance to the next number. If a number has not changed, you can just hit the right arrow key to move to the next number. Each line on the new constants list is one display full on the SL95. When advancing from the last number showing on the display, the SL95 will automatically

bring up the next display page of numbers.

6. When you have finished entering the new constants, hit the up arrow key to store the constants. The unit will give an error message if anything was entered incorrectly. If this happens, hit the down arrow key and then you can go back through the numbers using the right/left

arrow keys to find and correct the error.

7. If all numbers were entered correctly, the unit will automatically go into normal operation mode.

8. Slide black knob back into place to seal unit.